

WiFi Cell Charger Camera Instructions

1) On your smart device (tablet or smart phone) install the app "**LookCam.**"

Android – Google play store

iPhone – App store

- 2) Insert your micro SD card into the micro SD card slot on your Wi-Fi camera. (Don't force it)
- 3) Plug the camera into an outlet and wait 3 minutes for the device to fully power up and turn on (indicated by a flashing red / blue light).
- 4) On your smart device open **WiFi settings** and go to your available **Wi-Fi networks** list.
- 5) On this list, locate the name of your camera's network (UID number). Your camera's network will begin with **F** or **G**.
- 6) Connect to the camera's **network**
- 7) Open the **LookCam** app and the app will automatically connect to the camera. The app will ask if you would like to add this camera to the app. Click "**ok**".
- 8) A list of nearby Wi-Fi networks will appear. Choose your home network and input your password.
- 9) The camera will reboot. The reboot will take 2-3 minutes. The app will then indicate the camera to be "**online**" if done correctly.
- 10) Your App is now ready to go!

IMPORTANT SETTINGS

Click on gear symbol in the app.

- Click on **Alarm config**
 1. Set motion sensitivity to **medium**
 2. Turn **on/off** push notifications. "on" means that your mobile device will be notified every time the camera detects motion.
- Click on **SD Card** Setting
 1. Select **auto record** for non stop recording
 2. Select **alarm record** for motion detection recording
 3. Record resolution should be 1080P
 4. Turn on **loop record** if you want the SD card to rewrite automatically when it becomes full with data.