


How to Enable Facial Recognition for a standard IP Camera

1. Drag your mouse to the bottom left of the screen and click on the 4 boxes



2. Click on **Settings**

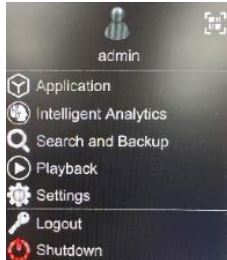

3. Click on **Face Recognition**



4. Select the camera that you want to enable Facial Recognition on at the top
5. Click on the box next to **Enable Detection by NVR**
6. Click on Apply in the bottom right corner and your camera should reboot.
7. After rebooting your camera should now have facial recognition enabled